

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS LAMP SHOULD TAKE APPROXIMATELY 2 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY HAND TIGHTENED (UNLESS DIRECTED TO USE A TOOL).

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER, DRILL AND PLIERS.

UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FINIAL, RUBBER WASHER, SHADE, HARP, LAMP ASSEMBLY. TO PROTECT THE FINISHES, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:

(3) 5-32 x 1" SCREWS, (3) NUTS, (4) PLASTIC ANCHORS, (4) 1" WOOD SCREWS AND (3) CYLINDER FINIALS.

ASSEMBLE THE LAMP:

1. ASSEMBLE THE SHADE, PLEASE SEE NEXT PAGE FOR DETAILS.

2. REMOVE THE WALL BRACKET FROM THE BACKPLATE BY REMOVING THE (3) CYLINDER FINIALS ON THE FRONT OF THE BACKPLATE.

3. PLACE WALL BRACKET IN THE DESIRED LOCATION ON THE WALL AND MARK WITH A PENCIL. (NOTE: THE WALL BRACKET SHOULD BE MOUNTED ON A WALL STUD USING A SCREWDRIVER. IF MOUNTING ON A HOLLOW AREA, DRILL 1/4" PILOT HOLES AND INSERT ANCHORS WHERE THE LOCATION WAS MARKED.) PLACE THE WALL BRACKET ON THE WALL, INSERT AND TIGHTEN WOOD SCREWS. (SEE WALL BRACKET ASSEMBLY ABOVE)

4. MOUNT THE BACKPLATE TO THE WALL BRACKET WITH THE (3) CYLINDER FINIALS REMOVED ABOVE. (MAKE SURE THE MOUNTING SCREWS GO THROUGH THE HOLES IN THE BACKPLATE, TIGHTEN THE CYLINDER FINIALS BEING CAREFUL NOT TO STRIP THEM.)

5. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE TWO ENDS INTO SOCKET COVER.

6. PLACE A SHADE ONTO HARP, THEN SECURE WITH RUBBER WASHER AND FINIAL.

7. INSTALL A 150 WATT MAX. MEDIUM BASE 3-WAY TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

8. PLUG THE POWER CORD INTO A POWER OUTLET AND TURN ON AT SWITCH.



CAUTION:
To avoid pinching fingers,
Use care when snapping
brackets into place.

Inside view

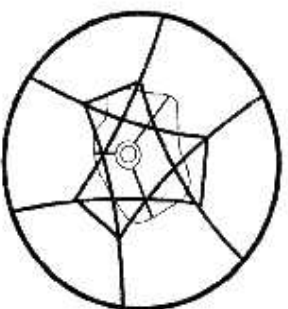


Figure 1

Inside view

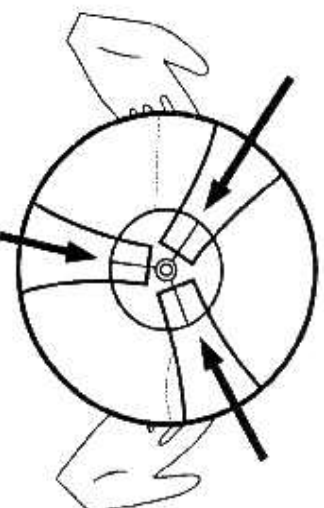


Figure 2

Top view

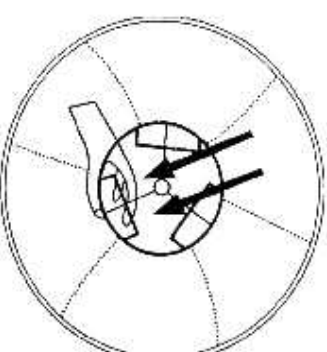


Figure 3

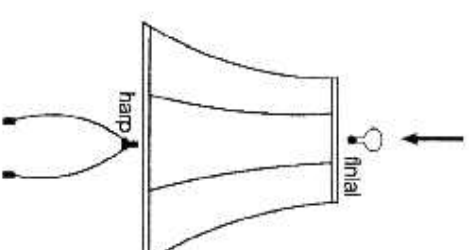


Figure 4

Step 1

Lay shade upside down with the large ring facing up, as seen in figure 1.

Step 2

With both hands pick shade up and let smaller ring and brackets fall down into shade, as seen in figure 2.

Step 3

Carefully turn shade right side up. Pivot brackets one at a time towards top of shade as seen in figure 3.

Step 4

Secure assembled shade to top of lamp, using harp and finial to hold shade in place, as in figure 4.

NOTE: Smart shades come in a variety of sizes and shapes. The shade you have purchased and the bracket configuration may be different than however the assembly procedure will be the same.

NOTE: During transit the shade fabric may become wrinkled. Following assembly, wrinkles will disappear within a few days.

MADE IN CHINA